


Fender®

MS-8 SWITCHER

OWNER'S MANUAL

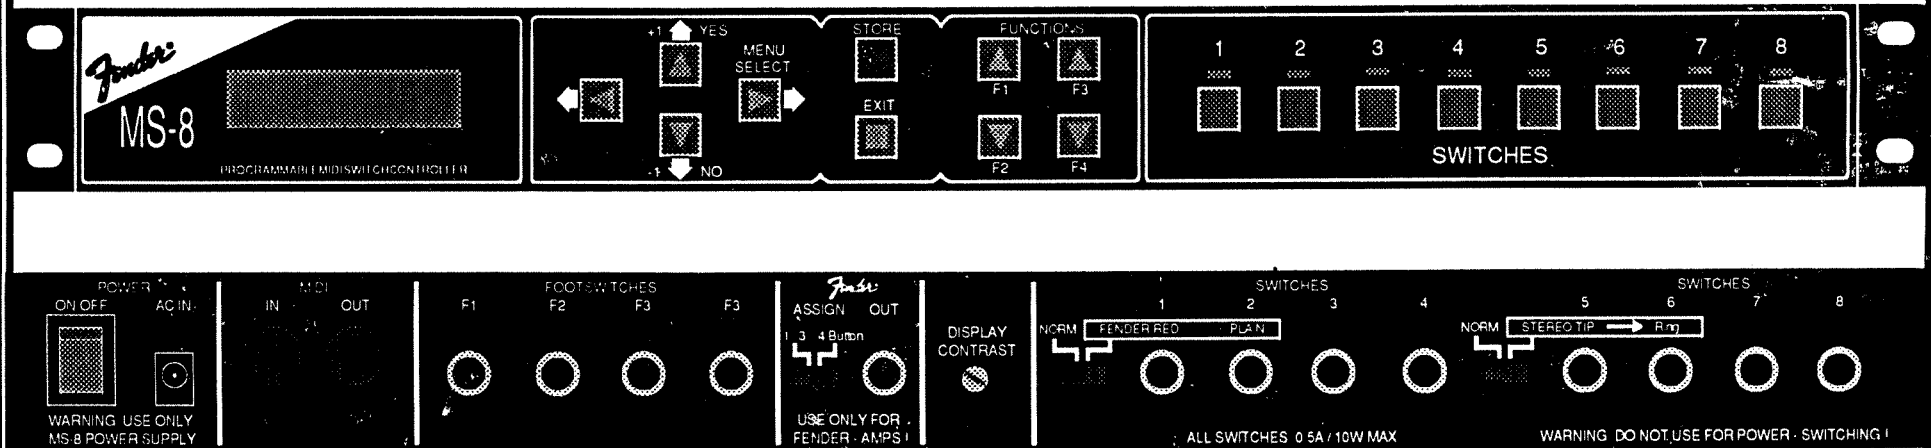

FENDER MUSICAL INSTRUMENTS
7975 N. Hayden Rd.
Scottsdale, AZ 85258

What the MS-8 Will Do

The MS-8 combines all of your footswitches and MIDI switching into one unit. Because the MS-8 has 128 memory locations, you can store up to 128 different switching combinations for all your equipment. Like many "microprocessor" based products, the MS-8 is a **MENU DRIVEN DEVICE**. This means, when programming the MS-8, you must select one of the various menus in order to modify that parameter.

The MS-8 can Replace Amplifier Footswitches

Standard Amplifiers

The MS-8 can perform the same functions as the footswitches of most standard amplifiers.

Older Fender Amplifiers

The MS-8 can perform the same functions as the footswitches of Fender amplifiers from the early '80's with "Red and Plain" footswitch arrangement (see #15 in Back Panel Explanation for specific models).

Newer Fender Amplifiers

The MS-8 can perform the same functions as the footswitches of Fender amplifiers from about 1987 on (these models use Fender's unique Multiplexing footswitch system).

Replace Other Footswitches

The MS-8 can control any unit that uses a footswitch to perform certain functions. This includes turning rack mounted and other effects on and off, starting and stopping tape machines, starting and stopping sequencers, and more.

Perform MIDI Mapping

The MS-8 can send out program change commands on up to 5 different channels at once. It can "tie together" an entire MIDI setup.

The MS-8 can also receive data MIDI program change information, and reconfigure it before sending it out (see the MIDI IN PRG. Menu).

Store Settings

The MS-8 can memorize up to 128 different combinations of your switching setups. Thus, when you have a certain combination of settings on all your equipment, you can store it in the MS-8 and recall it whenever you need it.

Arrange "SONGS"

You can group combinations of programs together into "SONGS", and call them up in a predetermined order.


What the MS-8 Will Not Do

The MS-8 is not designed for any type of audio signal to be routed through it. Instead, it is designed to use the 8 relay switches and MIDI data to turn effects on and off.

DO NOT CONNECT AUDIO OUTPUTS OR INPUTS TO THE MS-8!

HOOK-UP/SIGNAL FLOW CHART

This white area represents *input* into the MS-8. Everything else here (in the shaded area) represents the signal going *out* to other units.

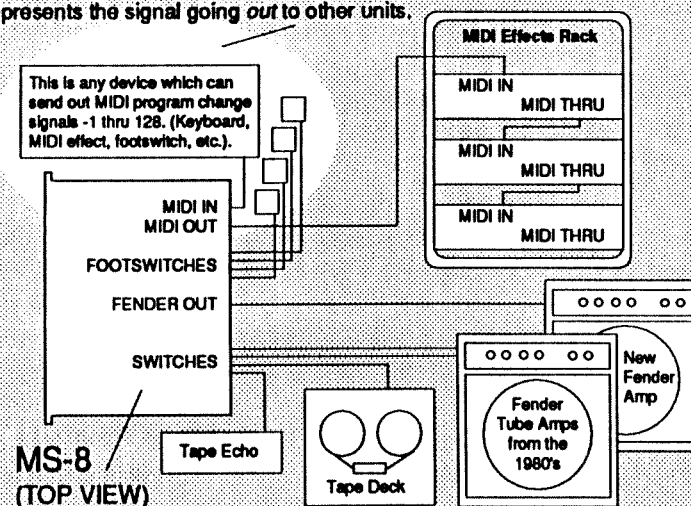

FRONT

Value and Menu Select Buttons


These buttons move you from menu to menu and make changes within each menu.

LEFT Menu Select, YES (+1), NO (-1), RIGHT Menu Select

Function Buttons

Act the same as footswitches plugged into the 4 FOOTSWITCHES jacks in the back panel.

They also have special function within the menus.

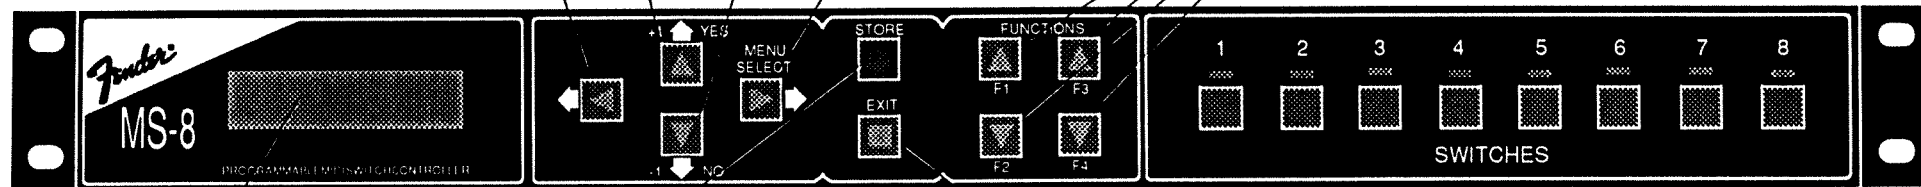

Status Screen

Shows what is currently happening

STORE Button

For saving programs

EXIT Button

Takes you to main menu

Footswitch On/Off Buttons

Set the on / off positions of units plugged into the 8 "SWITCHES" jacks in the back panel.

REAR

INPUT

MIDI In
Accepts MIDI information

FOOTSWITCHES
For Footswitches that control the MS-8

MIDI Out


Sends out MIDI information

FENDER ASSIGN

Sets this Jack up for new (multiplexing) Fender amplifiers. Refer to the Chart in MS-8 Back Panel Explanation to find out how to set this up for your amplifier.

SWITCHES

These connect to devices that will be turned On and Off by the MS-8. Buttons 1 and 2 can be set up to switch old Fender amplifiers. Buttons 5 and 6 can be set up to switch devices that have footswitches with a stereo cord

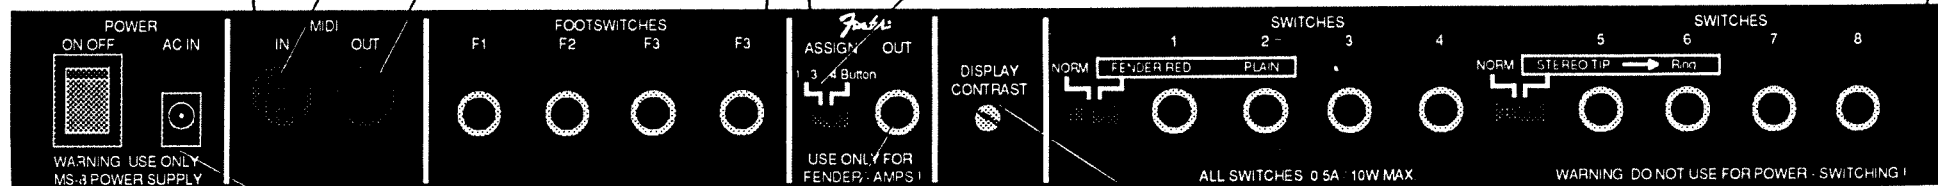

POWER

Turns the unit On and Off

DC In


The adaptor plugs in here

FENDER OUT

Connects to the Footswitch Jack of your new (multiplexing) Fender amplifier.

DISPLAY CONTRAST

Adjusts the angle at which the screen is readable.

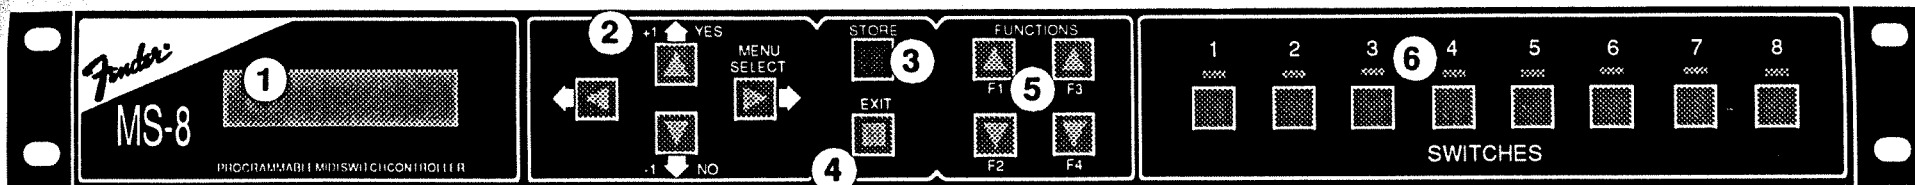

MS-8 FRONT PANEL EXPLANATION

1 Status Screen

This screen shows you what is happening in the MS-8, whether you are calling up programs, changing (editing) programs, or using other functions.

The Status Screen will show three different levels of menus: main menus (menus in the black strip on the Menu Chart), sub menus (menus which are accessed directly from the main menus), and *sub sub* menus (menus which are accessed from the sub menus). In addition, there is the Store menu, which is accessed only by pressing the Store button.

To get an overview, refer to the Menu Chart on page 5 and 6.

2 Scrolling Buttons

These 4 buttons—Left, Right, +1/YES, -1/NO—move the “cursor” to the left or right, change the values to which the cursor is pointing, and switch between some of the sub menus and *sub sub* menus. “Cursor” is a term which means the value that the MS-8 is currently set up to change. Whenever a value is underlined, that means the cursor is pointing to that value, and it can be acted on.

3 Store Button

Lets you store a specific set of switching information (a program) into permanent memory, to be called up in the future. You can use the Store button no matter what menu you are currently in.

To store a program, simply press the Store button once, and you will get the Store menu, which shows you the number of the program you are currently on (between 1 and 128), and then asks you what location you want to store it in (between 1 and 128). At this point, all 8 LED's above the SWITCHES will be flashing. Use the +1/YES and -1/NO buttons to choose the location, then press the Store button again. That program is now stored in the memory location (between 1 and 128) that you specified.

If you hit the Store button once, then decide you do not want to store the program, simply press the Exit button.

4 Exit Button

The Exit button has 3 functions: 1) When you are in a sub or sub sub menu, it returns you to the corresponding main menu; 2) When you are in a main menu, it returns you to the PLAY / EDIT menu; and 3) When you are in the Store menu, it cancels that function (see section above).

5 Function Buttons

These 4 buttons—F1, F2, F3, F4—do two things: 1) They perform the same functions as footswitches hooked up to the FOOTSWITCHES jacks on the MS-8's back panel; and 2) They perform special editing functions within many of the menus.

6 SWITCHES

These 8 switches—1, 2, 3, 4, 5, 6, 7, 8—control the status of the devices connected to the 8 SWITCHES jacks on the MS-8's back panel. The red LED above each SWITCH shows you whether that SWITCH is on (bright red) or off (dull red). It can also indicate when certain changes are being made, by flashing.

MS-8 BACK PANEL EXPLANATION

7 ON/OFF

This switch turns the unit on and off.

8 AC IN

The adaptor (included with the MS-8) plugs in here.

CAUTION: Use only the adaptor provided with the MS-8! Substituting another adaptor may damage the MS-8.


MIDI Jacks

9 MIDI IN

The MS-8 is set up so that it can be controlled by another MIDI device (an external MIDI device can trigger program changes on the MS-8). To accomplish this, connect the MS-8's MIDI In jack to the MIDI Out jack of the controlling device.

One very effective way to use this jack is to connect a MIDI FootSwitch to it (many companies make this type of switch).

NOTE: Since the MS-8 has no MIDI Thru jack, it must be the last unit in a MIDI chain. Signals received via the MS-8's MIDI In jack will not be “passed through” the MS-8's MIDI Out jack.

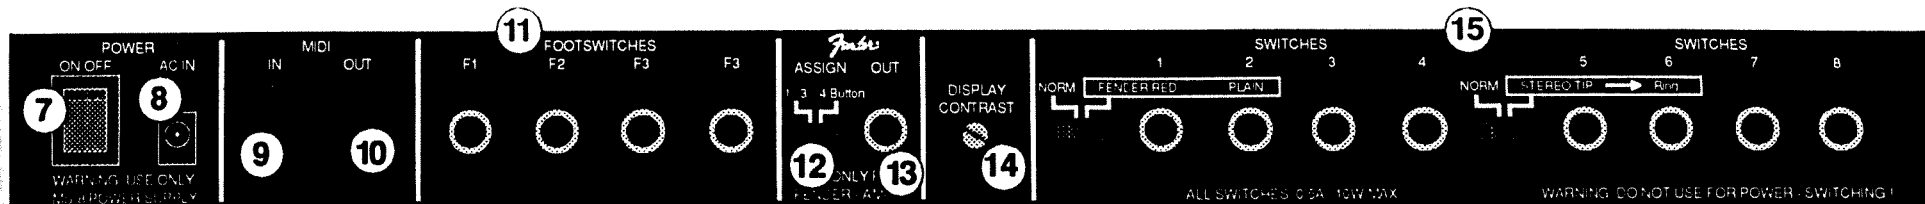

10 MIDI OUT

One of the major points of the MS-8 is its ability to control other MIDI devices by sending program number signals. To do this, connect the MS-8's MIDI Out jack to the MIDI In jack of the device you wish to control. If you want to control more than one external device (the MS-8 can send out information on 5 separate MIDI channels), simply create a MIDI chain, by connecting your MIDI devices like so:

```

MS-8 MIDI Out      ➔ Device #1 MIDI In
Device #1 MIDI Thru ➔ Device #2 MIDI In
Device #2 MIDI Thru ➔ Device #3 MIDI In
Device #3 MIDI Thru ➔ Device #4 MIDI In . . . etc.
  
```

11 FOOTSWITCHES

You must use positive momentary footswitches (closing types) with these jacks. They can then be set up to perform various controlling functions with the MS-8 (see FOOTSW. menu section).

12 ASSIGN

New Fender amplifiers utilize a Multiplexing system for footswitching, which simply means that more than one signal can be sent through a single cable (up to 4, in fact). If you have one of these amplifiers (see list below), use the chart provided to set the switch so that it corresponds to your amplifier.

Look in the chart provided here and see if your Fender amp is listed.

AMP NAME	TYPE OF FOOTSWITCH	FOOTSWITCH OPTIONS	MS-8 DISPLAY
Super 60 M-80 Super 112/210	1-button Footswitch:	Channel switching	CHN.1 / CHN.2
Princeton Chorus M-80 Chorus	2-button Footswitch:	Channel switching Chorus on or off	CHN.1 / CHN.2 CH. ON / OFF
The Twin Eighty-Five Dual Showman SR Head	2-button Footswitch:	Channel switching Reverb on or off	CHN.1 / CHN.2 REV. ON / OFF
Pro 185 Stage 185 London 185 Deluxe 85	3-button Footswitch:	Channel switching Boost on or off (channel 2) Reverb on or off	CHN.1 / CHN.2 / BOOST • REV. ON / OFF

Set ASSIGN Switch to "1...3"

AMP NAME	TYPE OF FOOTSWITCH	FOOTSWITCH OPTIONS	MS-8 DISPLAY
Power Chorus	4-button Footswitch:	Channel switching Boost on or off (channel 2) Reverb on or off Chorus on or off	CHN.1 / CHN.2 / BOOST • REV. ON / OFF CH. ON / OFF

Set ASSIGN Switch to "4"

* When Fender amplifiers have a Boost on/off control, the Fender footswitch is set up with one switch for channel switching and one switch for Boost on/off. But since the Boost works only on channel 2, there are actually three possible combinations: Channel 1; Channel 2; Channel 2 with Boost. The MS-8 is designed to switch between those three combinations.

NOTE: If your amplifier is not in this chart but is a post 1987 model, chances are that it does use Multiplex switching, but was designed after this manual was written. In that case, call Fender's Customer Service Department for assistance.

To set the MS-8 for your specific Fender amp, position the ASSIGN switch as shown in table.

13 OUT

If you do have one of the amplifiers listed in the table above, connect this jack—with any guitar or speaker cord—to your amplifier's Footswitch jack.

DISPLAY CONTRAST

Often, you will be looking at the MS-8's Status Screen from "above", such as when the MS-8 is mounted in a rack and you are standing. You can use the Display Contrast control to adjust the angle at which the Screen appears most clear. By turning the control clockwise, you raise the point—from direct horizontal to about 45 degrees—at which the characters on the screen are darkest.

SWITCHES


These 8 switches can be connected to any device that is turned on and off, started or stopped, etc., by a footswitch. Several of the switches have dual functions.

Switches 1 and 2 can be used to control these "older" Fender tube amplifiers (simply move the slide switch to the Fender Red/Plain position):

Super Champ, Princeton Reverb II, Deluxe Reverb II, Concert, Twin Reverb II

Switches 5 and 6 can be used if your amplifier requires a stereo cord for switching.

MS-8 SWITCHER MENU

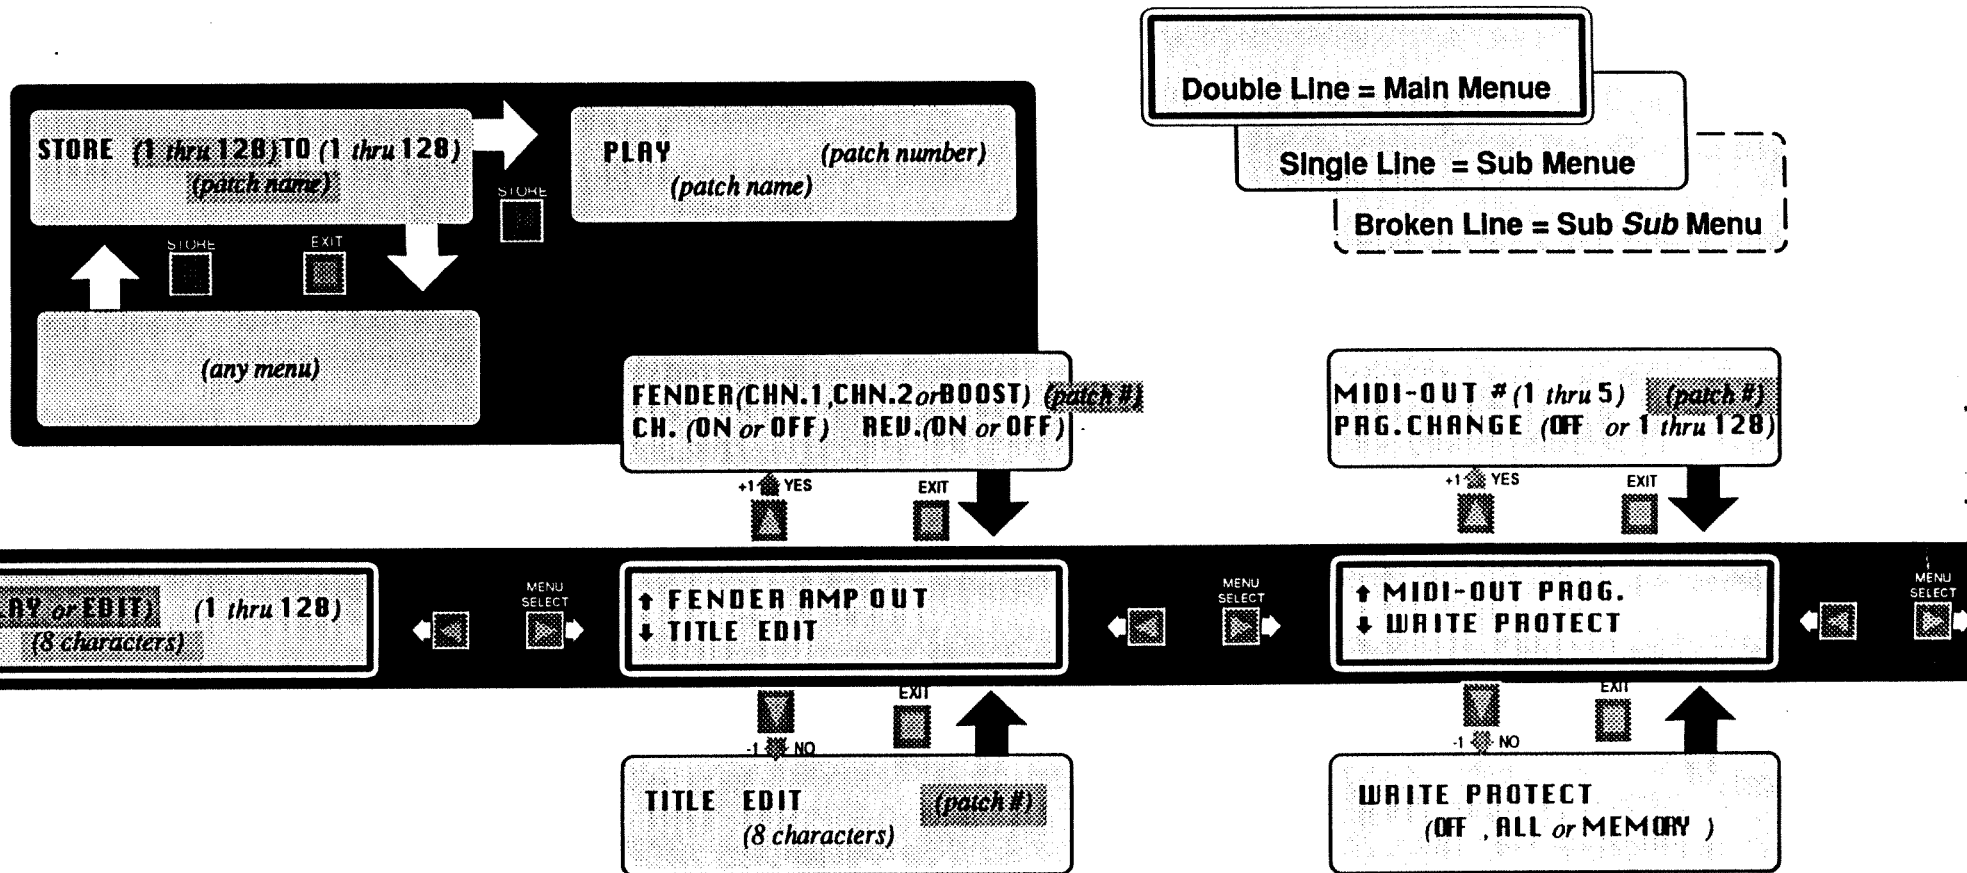

Character Chart

The following characters are all available, as well as a blank space:

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z
 a b c d e f g h i j k l m n o p q r s t u v w x y z
 0 1 2 3 4 5 6 7 8 9 - + * / = ! () # .

CHART

() = things in this menu you can change *directly*

() = things in this menu you can change *indirectly* (for instance, that change when you do other things)

() = things in this menu you cannot change

SONG (1 thru 100) STEP (1 thru 8)
(1 thru 128) (patch name)



FTSW. (1 thru 8) SWITCH TOGGLE (1 thru 8)
FTSW. (1 thru 8) SWITCH TOUCH (1 thru 8)
FTSW. (1 thru 8) PROGRAM (1 thru 128) (patch name)
FTSW. (1 thru 8) PROGRAM RELATIVE (-10 thru +10)
FTSW. (1 thru 8) SONG ABSOLUTE (1 thru 100)
FTSW. (1 thru 8) SONG RELATIVE (-10 thru +10)
FTSW. (1 thru 8) STEP ABSOLUTE (1 thru 100)
FTSW. (1 thru 8) STEP RELATIVE (-10 thru +10)
FTSW. (1 thru 8) PA-TOUCH (1 thru 128) (patch name)
FTSW. (1 thru 8) MD-TOUCH (1 thru 128) (patch name)

MIDI SETUP 1
ARE YOU SURE ?
INITIALIZED

MIDI OUT # (1 thru 5)
TRANSMIT CHN. (1 thru 16)

MIDI IN PAG. (1 thru 128)
(1 thru 128) (patch name)

MIDI IN RECEIVE CHN. (OFF, OMNI, 1 thru 16)



↑ SONGS/FOOTSW.
↓ SWITCH/FENDER



↑ MIDI SETUP
↓ HELLO MESSAGE



To or from
PLAY/EDIT
Menu

SWITCH # (1 thru 8) (ON or OFF)
POS.PULSE t= (1 thru 100)

NEG.PULSE t= (1 thru 100)

POS.SWITCH

NEG.SWITCH

FENDER AMP1

FENDER AMP2
CHO.

FENDER AMP3
REV.

FENDER AMP4
BOOST REV.


FENDER AMP5
BOOST CHO REV.

"HELLO" MESSAGE
(16 characters)

MENU OVERVIEW

Getting to each Main menu

When you turn the MS-8 on, you will see the PLAY/EDIT menu. To get to the other 4 Main Menus, simply use the Left and Right Menu Select buttons.

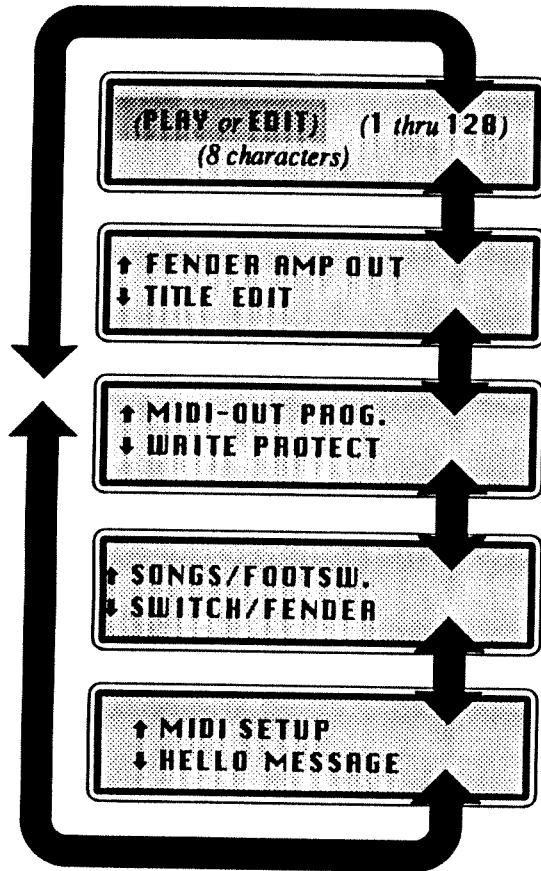

Choosing Upper or Lower Sub menu

Except for the PLAY/EDIT menu, each Main menu has an upper and lower menu, indicated by up and down arrows. To get from the Main menu to the upper and lower sub menus, use the +1/YES button to go up and the -1/NO button to go down.

Returning to Main menu

Pressing the EXIT button when you are in one of the Sub menus always returns you to the corresponding Main menu. Pressing the EXIT button when you are already in one of the Main menus returns you to the PLAY/EDIT menu.

Moving Between Sub Menus

The menus directly off the Main menus are Sub menus. But sometimes there two menus off a Main menu (as in the case of the SONGS/FOOTSW. and the SWITCH/FENDER Main menus).

To access them, use the +1/YES button to go up and the -1/NO button to go down to the first Sub menu, then use the Left and Right Menu Select buttons to move between the 2 Sub menus.

Moving Between Sub Sub Menus

Some sub menus have several different variations, and these are sub sub menus. Sub sub menus are contained within the FOOTSW., SWITCH, FENDER, and MIDI SETUP menus. Once you are in a set of sub sub menus, you move between them by using the Left and Right Menu Select buttons or the Function buttons.

STORE Menu

STORE (1 thru 128) TO (1 thru 128)
(patch name)

No matter where you are: when you press the STORE button, the STORE menu will show up. It will display the number of the program you are working on (left), and you can choose which program number you want to save it in (using the +1/YES and -1/NO buttons).

Pressing the STORE button again completes the save. Pressing the EXIT button will cancel the STORE function.

PLAY / EDIT Menu



Main Menu

PLAY

When you turn on the MS-8, you will see this menu, with PLAY in the upper left hand corner. Use the +1/YES and the -1/NO buttons to scroll up and down patch numbers, respectively. As you change patch numbers, the corresponding patch name will appear in the lower row.

Setting SWITCHES

It is in this menu that you can set the on/off position of the 8 SWITCHES, by simply pressing any of the SWITCHES buttons. When the LED above a SWITCH is glowing bright red, that SWITCH is on. When the light is a dull red, the SWITCH is off.


EDIT

As soon as you change one of the 8 SWITCHES, the PLAY in the upper left hand corner changes to EDIT, indicating that you are "editing" the current program.

This menu will remain in the EDIT mode until you: 1) Store the program you are working on into memory; or 2) Change to another program number. If you do change the program number (without using the STORE button to save the changes into memory), the program you *were* working on will revert to the way it was before you changed it, and any changes you made will be lost.

Whether or not you start in the EDIT mode: if you go to another menu and make changes (without storing them into memory), the PLAY/EDIT menu will be in the EDIT mode when you return to it.

FENDER AMP OUT Menu

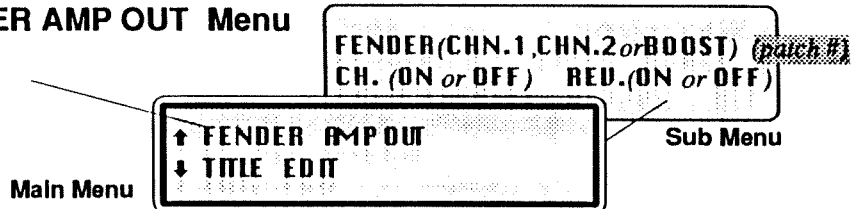

This menu corresponds to the FENDER OUT jack in the rear panel. It is used for setting up configurations for new Fender amps that use Multiplex footswitching.


Depending on the way you have set the FENDER menu (later in this manual), the FENDER OUT menu may offer different possibilities. Use the Left and Right Menu Select buttons to move from option to option, and use the +1/YES and the -1/NO buttons to change the value of that option. The option that is underlined is the one the +1/YES and -1/NO buttons will change the value of.

The Program Number displayed in the upper right corner is the one you are working on. You cannot change to another program in this menu.

Function buttons:

- F1 goes between CH.1, CH.2, and BOOST
- F2 turns the CH. (chorus) ON and OFF
- F3 (no function)
- F4 turns REV. (reverb) ON and OFF

TITLE EDIT Menu

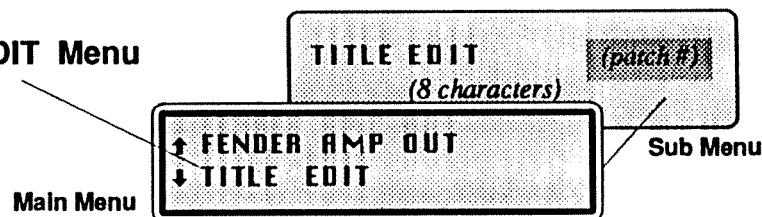


It is from this menu that you change the title of a given patch. Use the Left and Right Menu Select buttons to move the cursor from one character position to the next in the name, and use the +1/YES and the -1/NO buttons to change that character (see Character Chart on the Menu Chart page for possible characters).

Function buttons:

- F1 deletes the character
- F2 inserts a blank space *between* characters
- F3 clears the entire name
- F4 cancels all [title] edits, and restores the old name

MIDI-OUT Menu

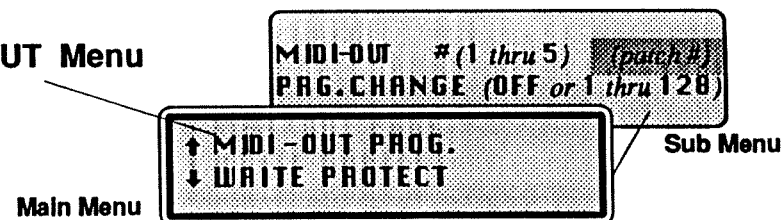

This menu sets up the "MIDI mapping" function of the MS-8. For each of 5 MS-8 MIDI channels, you can send out any PRG.CHANGE (program change) number from 1 to 128, or you can send no program change information ("OFF").

It is important to remember that these channels—1 through 5—are the MS-8's internal channels 1 through 5, and do not necessarily correspond to the 16 possible MIDI channels. The actual MIDI channel that each internal MS-8 channel operates on is determined later in this manual, in the MIDI OUT # menu.

For instance, the MS-8's channel 3 could be set up to send out MIDI information on MIDI channel 14, while the MS-8's channel 1 could actually be set up to send out MIDI information on MIDI channel 1.


Use the Left and Right Menu Select buttons to move the cursor from option to option, and use the +1/YES and the -1/NO buttons to change the value of that option.

Function buttons:

- F1 previous MIDI OUT #
- F2 next MIDI OUT #
- F3 previous PRG.CHANGE
- F4 next PRG.CHANGE

NOTE: This is a "Global Menu" (see section at end of this manual)

WRITE PROTECT Menu

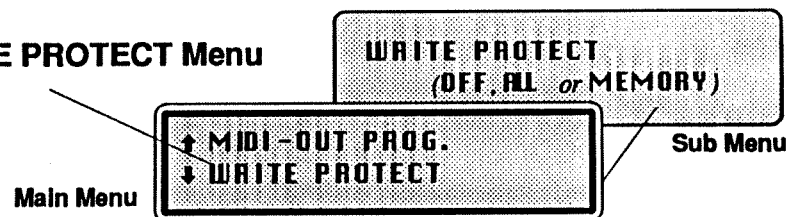

When you have important programs that you do not wish to change—even by accident!—you can “lock” them into memory using this function.

MEMORY Protects your stored programs. Changes can be made to the programs, but those changes cannot be saved.


ALL Same as **MEMORY**, but has one additional function: in this mode, none of the 8 **SWITCHES** can be changed.

OFF Allows you to overwrite any program.

Use the Left and Right Menu Select buttons to select one of the three options.

Function buttons: F1 OFF - F2 MEMORY - F3 ALL - F4 (no effect)

SONGS Menu

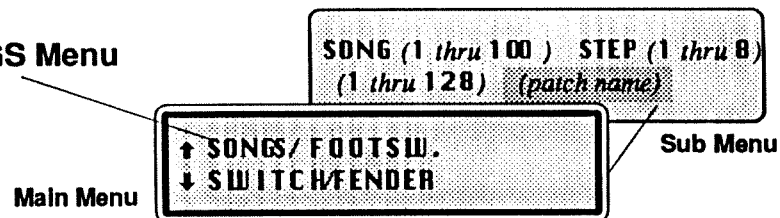

The MS-8 can combine program changes together into groups called **SONGS**. This can be useful. For instance, suppose during a certain song, you know that you will use program #102 for the intro, program #50 for the first verse, program #17 for the chorus, back to program number #50 for the second verse, and so on. You could link these program numbers together into a **SONG**, and just use a footswitch to go from one program to the next.

These program changes within a **SONG** are called **STEPS**, and each **STEP** calls up one program number. You can have up to 8 **STEPS** in a **SONG**. When you get to the last **STEP**, the MS-8 cycles around to the first **STEP**. Up to 8 **STEPS** can be used in each **SONG** (but you don't have to use that many). The MS-8 can remember up to 100 different **SONGS**.


In the **SONGS** menu, start with a **SONG** number. For each **STEP** (1 through up to 8), choose a program number. Use the F1 and F2 buttons to move the **SONG** number up and down (respectively). Use the F3 and F4 buttons to move the **STEP** number up and down (respectively). Use the +1/ YES and -1/ NO buttons to move the patch number up and down (the patch name will change along with the patch number).

The Left and Right Menu Select buttons will move you to the next sub menu that is accessed from this main menu: the **FOOTSW.** menu.

Step 1 - Select any **SONG** mode

Step 2 - Use F1 and/or F2 to select Song number

Step 3 - Use F3 and/or F4 to select Program number

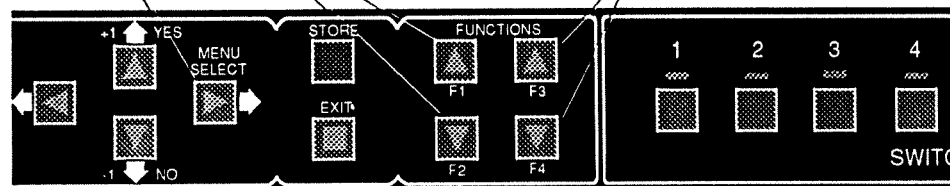

PROGRAM / ABSOLUTE The footswitch instantly selects any one of the 128 programs.

FTSW. (1 thru 8)	PROGRAM
(1 thru 128)	(patch name)

PROGRAM / RELATIVE The footswitch moves up or down through the programs each time you hit it. This function has an extra capability, in that you can set the increment amount anywhere from -10 to +10. So that, for instance, if you had the increment set to +7, and you were on program 40, hitting the footswitch once would change the the MS-8 to program 47, hitting the footswitch again would change the the MS-8 to program 54, and so on.

FTSW. (1 thru 8)	PROGRAM
RELATIVE	(-10 thru +10)

SONG / ABSOLUTE The footswitch instantly selects any one of the 100 SONGS.

FTSW. (1 thru 8)	SONG
ABSOLUTE	(1 thru 100)

SONG / RELATIVE The footswitch moves up or down through the SONGS each time you hit it. This function has an extra capability, in that you can set the increment amount anywhere from -10 to +10. So that, for instance, if you had the increment set to +7, and you were on SONG 40, hitting the footswitch once would change the the MS-8 to SONG 47, hitting the footswitch and again would change the the MS-8 to SONG 54, and so on.

FTSW. (1 thru 8)	SONG
RELATIVE	(-10 thru +10)

STEP / ABSOLUTE The footswitch instantly selects any one of the 8 STEPS.

FTSW. (1 thru 8)	STEP
ABSOLUTE	(1 thru 100)

STEP / RELATIVE The footswitch moves up or down through the STEPS each time you hit it. This function has an extra capability, in that you can set the increment amount anywhere from -10 to +10. So that, for instance, if you had the increment set to +7, and you were on STEP 1, hitting the footswitch once would change the the MS-8 to STEP 8, hitting the footswitch again would change the the MS-8 to STEP 7, and so on.

FTSW. (1 thru 8)	STEP
RELATIVE	(-10 thru +10)

PR-TOUCH The footswitch instantly selects any one of the 128 programs, but stays there only as long as you are holding the footswitch down


FTSW. (1 thru 8)	PR-TOUCH
(1 thru 128)	(patch name)

MD-TOUCH Same as above, but transmits only the MIDI change information in the selected program.

FTSW. (1 thru 8)	MD-TOUCH
(1 thru 128)	(patch name)

Additional Note for Footswitching:

There are anumber of MIDI footswitches on the market. Any footswitch that sends program change data will work with the MS-8. For maximum flexibility, try using both a MIDI footswitch and one or more momentary switches.

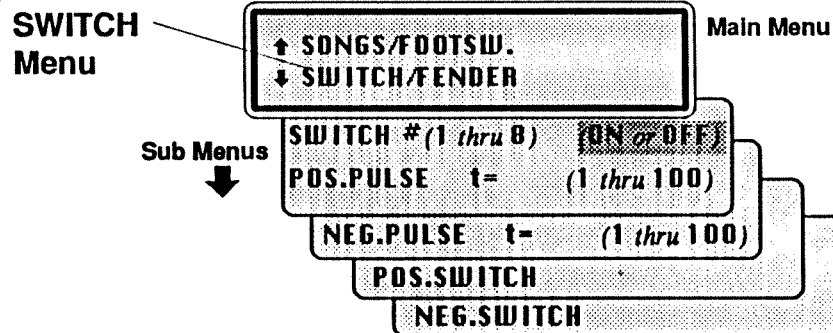

Because different devices utilize different kinds of footswitches, the MS-8 has been designed to cover a number of possibilities. Thus, each of the 8 SWITCHES can be set up to operate in 4 different modes:

- POS.PULSE (positive) This sends out a momentary positive voltage pulse. You can control the length of the pulse. If the LED is dim, the switch is opened.
- NEG.PULSE (negative) Same as above, but with negative voltage. If the LED is on, the switch is opened.
- POS.SWITCH (positive) Acts like a normal toggle switch, using positive voltage. When the LED changes, the switch will be closed for a specific time.
- NEG.SWITCH (negative) Same as above, but with negative voltage. When the LED changes, the switch will be closed for a specific time.

If you do not understand the previous information, do not despair! Owners Manuals for most products don't even mention what type of footswitch is used. What you will probably have to do is experiment with the MS-8 a little to find which mode works for your other equipment. And don't worry—you can't hurt anything!


HINT: Normally, units with footswitches are switched by a PULSE time of 1 to 10 milliseconds (set "t =" somewhere between 1 and 10). Computerized units, such as multieffects, etc., are switched by a longer PULSE time of 20 to 100 milliseconds (set "t =" somewhere between 20 and 100).

Use the Left and Right Menu Select buttons to move the cursor from option to option, and use the +1/YES and the -1/NO buttons to change the value of that option.

The Left and Right Menu Select buttons will move you to the next set of sub sub menus that is accessed from this main menu: the FENDER sub sub menus.

Function buttons:

F1 - POS.PULSE, F2 - NEG.PULSE, F3 - POS.SWITCH, F4 - NEG.SWITCH

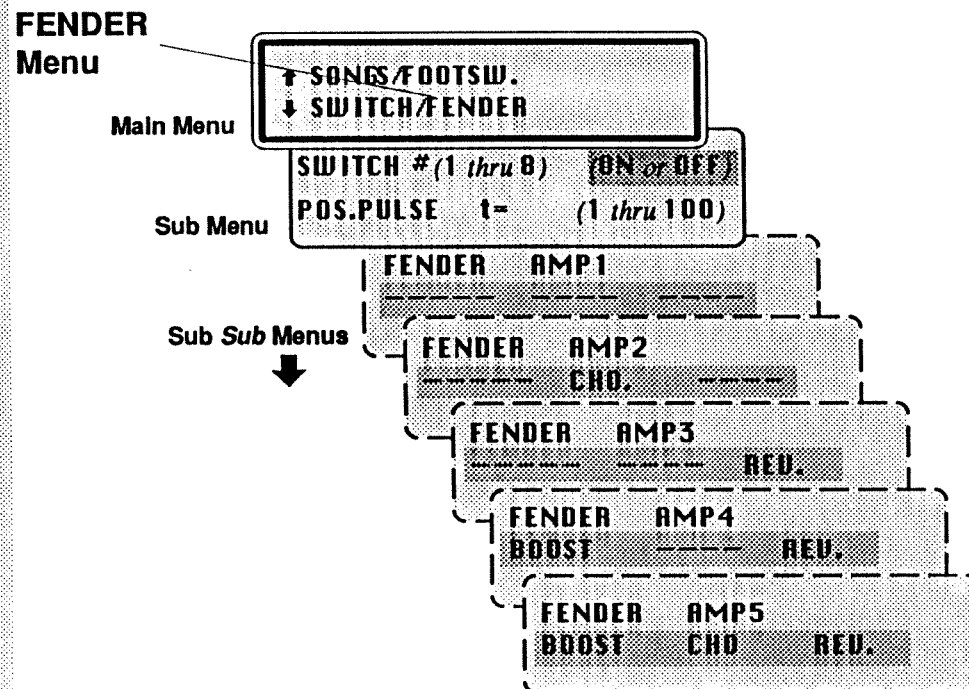


If you have one of the new Multiplexing Fender amplifiers (see chart in BACK PANEL section), you will use these sub sub menus to match the MS-8 with your specific model of amplifier. Simply use the +1/YES and -1/NO buttons to change the value of these sub sub menus until you get the one that matches the footswitch that came with your amplifier.

The sub sub menu you select here (AMP1, AMP2, AMP3, AMP4, or AMP5) will be reflected in the FENDER AMP OUT Menu.

NOTE: You must choose the sub sub menu that matches your footswitch. Choosing the wrong sub sub menu here will not alter the performance of your amplifier. For example, if your amplifier does not have Chorus, selecting one of the sub sub menus with CHO. will not add chorusing to your amplifier.

MIDI Setup

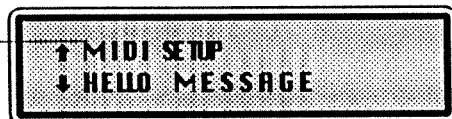

Main Menu

Following are the 4 sub *sub* menus of the MIDI Setup main menu. Use the +1/YES button to get to the first sub *sub* menu (MIDI IN). Once you are in the MIDI IN sub *sub* menu, use the Left and Right Menu Select buttons to get from option to option in each sub menu, and to move from sub *sub* menu to sub *sub* menu. Use the +1/YES and -1/NO buttons to change the values of the variables.

MIDI IN Sub Sub Menu




When you are using an external MIDI device to call up programs on the MS-8, you can determine which of the 16 MIDI channels the MS-8 receives information on. The options are:

OFF The MS-8 ignores all incoming MIDI information.
 OMNI Responds to incoming MIDI information on any MIDI channel.
 1 thru 16 Responds to incoming MIDI info only on the specific channel you select. Ignores incoming MIDI info on all other channels.
 Use +1/YES and -1/NO buttons to change values (OFF, OMNI, 1, 2, 3, ... 16)

Function buttons: F1 - OFF, F2 - OMNI, F3 - (no effect), F4 - (no effect)

MIDI IN PRG. (Program) Sub Sub Menu

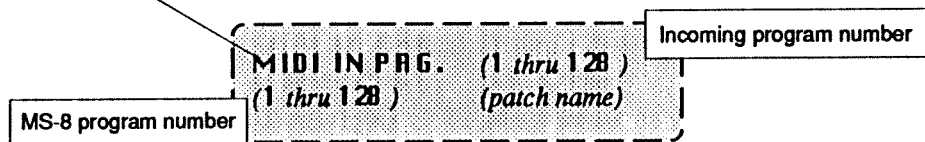


When you are using a MIDI device to control the MS-8, the incoming MIDI program numbers don't have to correspond to the MS-8 program numbers. For instance, when the MS-8 receives program number 48, that could trigger program 113 in the MS-8. Or it could trigger 63, or 19, or any MS-8 program you decide. You can set up each of the incoming 128 program numbers to choose any MS-8 program you want.

Use the Left and Right Menu Select buttons to move between the options, and the +1/YES and -1/NO buttons to change the values of each.

Function buttons: (for MIDI IN PRG.)

F1 - Incoming Program number increment
 F2 - Incoming Program number decrement
 F3 - Program number increment
 F4 - Program number decrement

MIDI OUT # (Number) Sub Sub Menu

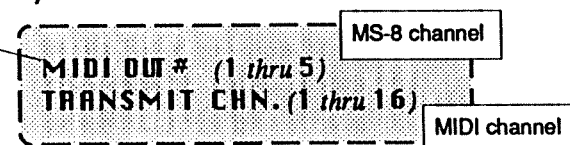

Use this menu to assign each of the 5 internal MS-8 channels the MIDI channel on which it will transmit. For example, MS-8 channel 1 could transmit on MIDI channel 9, MS-8 2 could transmit on MIDI channel 3, etc.

Use Left and Right Menu Select buttons to move between the options, and the +1/YES and -1/NO buttons to change the values of each option.

CAUTION: Make sure you don't set 2 or more channels to the same MIDI channel! If you do, you will be sending to program change signals to your external device.

Function buttons:

F1 - Channel number increment
 F2 - Channel number decrement
 F3 - MIDI channel number increment
 F4 - MIDI channel number decrement

MIDI SETUP ! Sub Sub Menu



Be careful with this sub *sub* menu. Once you are in it, if you press the +1/YES button, all the MIDI settings in this group of sub menus reverts to the factory settings, which are:

MIDI IN OMNI
 MIDI IN PRG. Incoming program numbers same as MS-8 program numbers
 MIDI OUT # MS-8 channel 1 set to MIDI channel 1; all other MS-8 channels set to OFF

"HELLO" MESSAGE Menu

↑ MIDI SETUP
↓ HELLO MESSAGE

With this menu, you can create the message that will appear every time the MS-8 is switched on. Your message can be up to 16 characters long.

Use the Left and Right Menu Select buttons to move from one character position to the next in the name, and use the +1/YES and the -1/NO buttons to change that character (see Character Chart on the Menu Chart page for possible characters). The character that is underlined is the one the +1/YES and -1/NO buttons will change.

Function buttons:

- F1 - Deletes the character
- F2 - Inserts a blank space *between* characters
- F3 - Clears the entire name
- F4 - Cancels all [title] edits, and restores the old name

IMPORTANT INFORMATION

Radio and Television Interference

This unit has been verified to comply with the limits of a Class B computing device, pursuant to Subpart 15 of FCC rules. Operation with non certified or non verified equipment is likely to result in interference to radio and TV reception.

Back Up Battery

With a 3V internal lithium battery to keep the memory intact when the power is turned off.
CAUTION: Due not expose the battery to extreme heat or light. Explosion could result.

AC Adaptor

CAUTION: Use only the adaptor provided! Substituting adaptor may damage the MS-8.

Switches

CAUTION: Never connect High Voltages (more than 40V) to Switch Outputs!

Specifications (Subject to change without notice)

Dimensions 484mm x 180mm x 45mm
Weight 1575g
RAM 8K bytes
Relays (9) 500 mA, 10 Watts maximum
Display 32 characters, LED backlit, adjustable contrast
Transformer AC 7.5V, 1A / DC 9V, 1.5A
Inputs AC 7.5V, 1.5A - MIDI In - (4) Standard footswitches
Output MIDI Out - Fender Amplifier
(8) Switches (All switch outputs are electrically isolated from the unit)

Global vs. Local Memory

The MS-8 has 128 memory locations (programs). Each of these programs can store a number of pieces of information. This is called Local memory.

In addition, the MS-8 can store information that affects all 128 programs. This is called Global memory. The data in Global memory does not change when you move from program to program, or edit programs.

Local Memory:

SWITCHES On/off position of the 8 switches
FENDER AMP OUT Channel, Boost, Chorus, and Reverb status
MIDI OUT Program numbers that are transmitted on the 5 different MIDI channels
TITLE EDIT Title of Program

Global Memory:

WRITE PROTECT Off, All, or Memory
SONGS Steps
FOOTSW. Function of footswitches
SWITCH Switch type
FENDER Your amplifier type
MIDI SETUP All MIDI info except MIDI OUT data above
HELLO MESSAGE Opening message

Factory Settings

Here are all the settings that were put into the MS-8 at the factory:

HELLO MESSAGE.....HI, r u ready?

TITLE EDITAll programs titled: *UNUSED*

FENDER AMP OUT...CHN. 1, CH. OFF, REV. OFF

WRITE PROTECT.....OFF

MIDI SETUP

MIDI OUT.....MS-8 channel 1 set to MIDI channel 1, all other MS-8 channels (2 through 5) off.

MIDI IN0 MNI (receive on all channels)

MIDI IN PAG. ...Incoming MIDI program numbers equal to MS-8 program numbers.

SONG/FOOTSW.SONG1's STEPS are program numbers 1 to 8, SONG2's STEPS are program numbers 9 to 16, and so on, up to SONG 10 (STEPS are program numbers 73 to 80).

FOOTSW.

FTSW. 1SONG	RELATIVE	+ 1
FTSW. 2SONG	RELATIVE	- 1
FTSW. 3STEP	RELATIVE	+ 1
FTSW. 4STEP	RELATIVE	- 1
FTSW. 5PROGRAM	ABSOLUTE	10
FTSW. 6PROGRAM	TOUCH	12
FTSW. 7MIDI	TOUCH	15
FTSW. 8SWITCH	TOUCH	8

SWITCH

SWITCH1POS.SWITCH	
SWITCH2POS.SWITCH	
SWITCH3POS.SWITCH	
SWITCH4POS.SWITCH	
SWITCH5POS.PULSE	t = 20
SWITCH6POS.PULSE	t = 20
SWITCH7POS.PULSE	t = 20
SWITCH8POS.PULSE	t = 20

FENDER.....AMP 5